

# INSTRUCTION SHEET

## REPAIR KIT

- 1) LUBRICATE ALL SEALING SURFACES AND FILL SPACE BETWEEN SEALS WITH LUBRICANT PROVIDED.
- 2) AVOID GETTING LUBRICANT IN SPLINES OF SHAFT.
- 3) FOR BEST RESULTS USE ALL PARTS PROVIDED.

